


# User's Manual

# EQUATIC

Wireless & Water Resistant  
Micro-Speaker

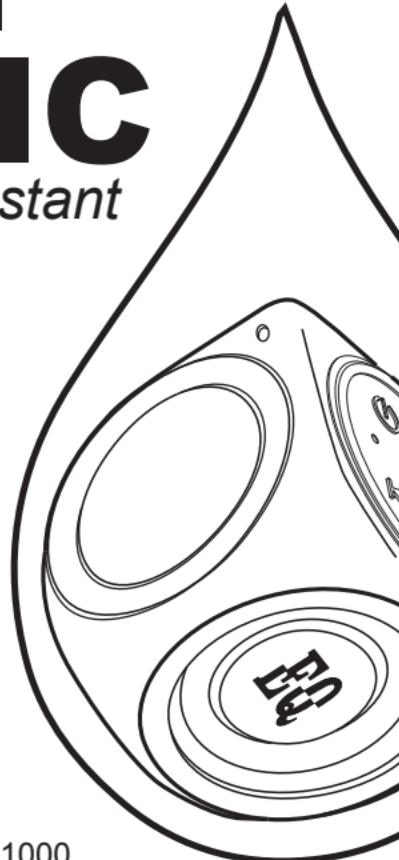

**EARTHQUAKE®**  
**S O U N D**

The Sound That Will Move You

Earthquake Sound Corp. Tel: (510) 732-1000  
(800) 576-7944 | [www.earthquakesound.com](http://www.earthquakesound.com)

## Dear Customer,

Thank you and congratulations on purchasing the Wireless, Water Resistant EQuatic Micro Speaker. To operate properly, please read this manual carefully before use.

## Function

1. Supports outdoor play, crash resistant, and dustproof
2. Water resistant
3. Wirelessly connect to Bluetooth® enabled devices
4. Supports hands free

## Specifications

Output Power: 3 Watts  
Charging Current: 300mA  
Charging Time: 1.5 Hours  
Music Play: 3 Hours  
Talk Time: >5 Hours  
Standby: 4 Hours

## Package Includes:

1. EQuatic Speaker.....1pc
2. USB Line.....1pc
3. Hook.....1pc
4. User Manual.....1pc

## ON/OFF

To power on your speaker press and hold the "ON/OFF" button for 3 seconds and wait for the "POWER ON" voice prompt. LED will flash RED and BLUE. To power down your speaker press and hold the "ON/OFF" button for 5 seconds and wait for the "POWER OFF" voice prompt. LED will light RED.

## Wireless Connection

Wirelessly stream music to the EQuatic by connecting to your Bluetooth® enabled device. Once connected the LED will turn BLUE, and when music signal is received the LED will FLASH BLUE.


## How To Operate

### When Playing Music

1. Press the “Play/Pause/Phone” (5) button to pause the music. Press the button again to resume playing.
2. Press the “Vol-/Previous Song” (3) button to play the previous song
3. Press the “Vol+/Next Song” (6) button to play the next song.
4. While music is playing press and hold the “Vol-/Previous Song” (3) button to lower the volume.
5. While music is playing press and hold the “Vol+/Next Song” (6) button to increase the volume. When you have reached full volume an indicating “beep” will sound.

## Function Keys

1. ON/OFF
2. LED Indicator Light
3. Vol-/Previous Song
4. Microphone
5. Play/Pause/Phone
6. Vol+/Next Song

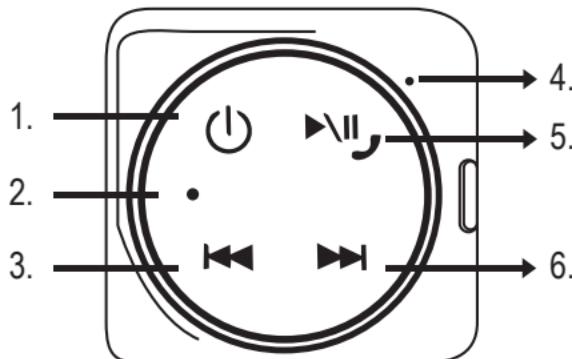

## Hands Free

1. When a call comes in while playing music, press the “Play/Pause/Phone” (5) button to answer the call, press the button twice to ignore the call.
2. After answering a call, press the “Play/Pause/Phone” (5) button once to hang up.
3. When the speaker is powered and not in a call-answering situation, press the “Play/Pause/Phone” (5) button twice to redial the last call.

## Battery Charging

Insert the Micro USB charging cable into the speaker’s USB port and insert the other end into 5V USB charger. While charging the LED will light RED. When finished charging the LED will light BLUE.

## Tips

1. To help prolong the life of your speaker and your health, do not listen to music at high volume for extended periods of time.
2. When a fault occurs, immediately turn off the speaker and unplug the USB to prevent damage to speaker and other components.
3. The amount of battery will affect the Wireless range. Charge before use.